



Mercedes-Benz

Accessories



Installation Instructions

Mobile phone bracket
Sony Ericsson K600i

© 2007, Daimler AG

07/06
03F039-06

1

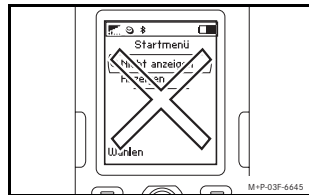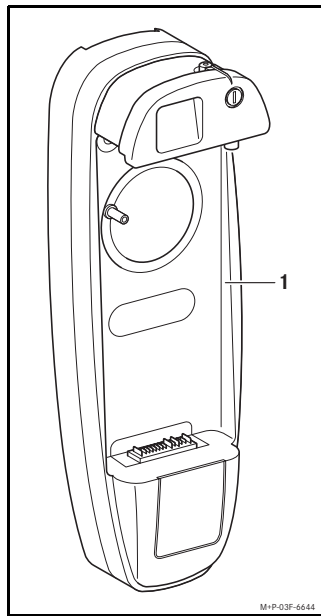

GB

Validity

These installation instructions are valid for vehicles equipped with the following:

- Mobile phone fitting with interface (Code 386) or
- Mercedes-Benz mobile phone (Code 388) or
- Mercedes-Benz hands-free system for the multi-function steering wheel

- in each case in conjunction with a Sony Ericsson mobile telephone K600i.

Parts included

- (1) Mobile telephone cradle

Notes

Please contact a qualified specialist workshop if you encounter difficulties when fitting the mobile telephone cradle.

Mercedes-Benz recommends that you use a Mercedes-Benz Service Centre for this purpose.

The manufacturer reserves the right to change technical details from those shown in the illustrations contained in these installation instructions.

These installation instructions also refer to the vehicle's Owner's Manual and the mobile telephone operating instructions. Please keep them handy for reference.


2

Contents

- Fitting the mobile telephone cradle ▷ 3
- Inserting the mobile telephone ▷ 3
- Hands-free mode display ▷ 4
- Downloading the telephone book ▷ 4
- Operating instructions ▷ 5
- Removing the mobile telephone ▷ 7
- Detaching the mobile telephone cradle ▷ 7


3

Fitting the mobile telephone cradle

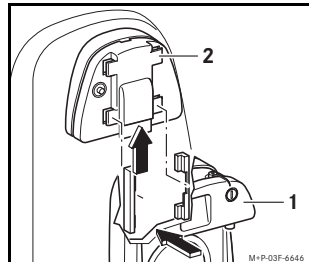

Press the cradle (1) into the catches of the pre-installed bracket (2) and push it upwards until it audibly engages.

Inserting the mobile telephone

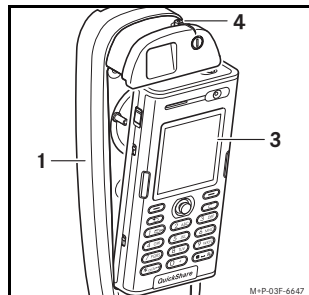

Insert the mobile telephone (3) into the cradle (1) as shown.

Note

The mobile telephone (3) can be switched on and off by pressing the button (4).

4


Hands-free mode display

For the hands-free system to operate properly, the mobile telephone has to be inserted and switched on, and it must switch automatically to the "Port. Handsfree" profile.

Note

When there is an incoming call, the mobile telephone switches automatically to the "In car" profile. After the call is finished, the mobile telephone switches back to the "Port. Handsfree" profile. The currently activated profile is shown on the mobile telephone display.

Downloading the telephone book

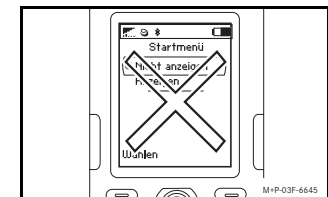

The telephone book cannot be downloaded in the following mobile telephone settings:

- Music Player only
- Continuous "Start" display

Therefore, the function "Start-up menu" should be deactivated (please refer to the mobile telephone operating instructions).

Operating instructions

Operation of the hands-free system via the multi-function steering wheel and how to set the run-on time are explained in the vehicle's Owner's Manual.

Press the **+** button to display the name of the caller (depending on vehicle model).

Press the **-** button to display the telephone number of the caller (depending on the vehicle model).

Press the **+** or **-** buttons to adjust the volume during a telephone call.

Notes

The hands-free system cannot access the telephone book on the SIM card. If you wish to use the SIM card telephone book entries, you must copy these entries into the telephone book of the mobile telephone (please refer to the mobile telephone operating instructions).

Using inverted commas in the telephone book can lead to malfunctions, as the communication between the mobile telephone and the mobile telephone cradle could be affected.

If the mobile phone uses a pre-paid system, depending on the provider, you might not be able to make use of some of the mobile telephone cradle functions.

When the mobile telephone is in hands-free mode, the Bluetooth® headset cannot be used.

The signal strength displayed in the operating system may differ from that in the mobile telephone display. This is due to the mobile telephone and does not necessarily indicate poor reception quality.

If there is an incoming call, the mobile telephone can vibrate while in the cradle. This function can be deactivated on the mobile telephone in the menus "Headset" and "In car" (please refer to the mobile telephone operating instructions).


If there is an incoming call, the mobile telephone's ring tone can sound while in the cradle. The volume can be lowered or the ring tone muted on the mobile telephone in the menu "Port. Handsfree" (please refer to the mobile telephone operating instructions).

Only for vehicles with mobile-phone fittings with interface (code 386) or Mercedes-Benz mobile telephone (code 388):

It is possible to set the speed dial function on Mercedes-Benz radios with number pad. Keys 1 - 9 can be used to access memory positions 1 - 9 of the telephone book. In order to call up the required numbers, memory positions 1 - 9 must be allocated in the telephone book (please refer to the mobile telephone operating instructions). For example, if you wish to store a number in memory position 1, this position must be selected using the number pad and then renamed.

To suppress your telephone number, the appropriate setting must be selected on your mobile telephone (please refer to the mobile telephone operating instructions).


Removing the mobile telephone

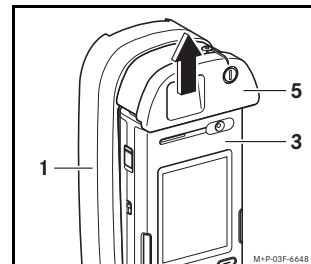

Slide the locking tab (5) upwards and pull the mobile telephone (3) out of the cradle (1).

Detaching the mobile telephone cradle

1. Remove the mobile telephone from the cradle (see above).

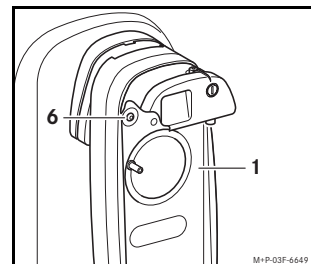

2. Press the release button (6) with a pointed object, slide the cradle (1) downwards and remove.