




Mercedes-Benz

Accessories

Installation Instructions

Mobile phone bracket
Sony Ericsson K750i

1

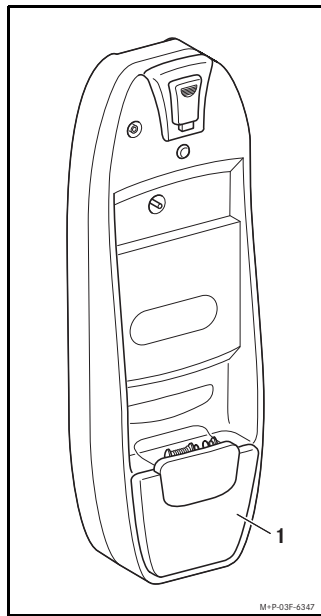

GB

Validity

These installation instructions are valid for vehicles with a mobile phone fixture with interface (Code 386), or a Mercedes-Benz mobile phone (Code 388), or with a Mercedes-Benz hands-free system for the multi-function steering wheel - in each case in conjunction with a Sony Ericsson K750i mobile phone.

Parts included

- (1) mobile phone bracket

Notes

Please contact a qualified specialist workshop if you encounter difficulties when fitting the mobile phone bracket.

Mercedes-Benz recommends that you use a Mercedes-Benz Service Centre for this purpose.

The manufacturer reserves the right to change technical details from those shown in the illustrations contained in these installation instructions.

These installation instructions also refer to the vehicle Owner's Manual. Please keep it handy for reference.

© 2007, Daimler AG


10/05
03F099-05

Contents

- Fitting the mobile phone bracket ▷ 3
- Inserting the mobile phone ▷ 3
- Hands-free mode display ▷ 4
- Removing the mobile phone ▷ 5
- Detaching the mobile phone bracket ▷ 5
- Operating instructions ▷ 6
 - Only for vehicles with mobile phone fitting with interface, or Mercedes-Benz mobile phone ▷ 7


2

Fitting the mobile phone bracket

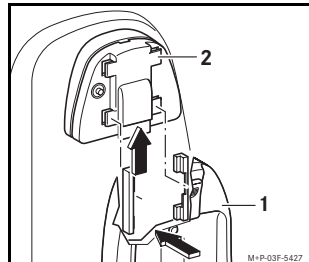

Press the bracket (1) into the catches of the pre-fitted retainer (2) and push it upwards until it audibly engages.

Inserting the mobile phone

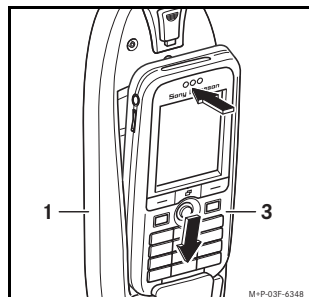


Insert the mobile phone (3) into the bracket (1) as illustrated.

3


Hands-free mode display

For the hands-free system to operate properly, the inserted and activated mobile phone has to be switched into hands-free mode.

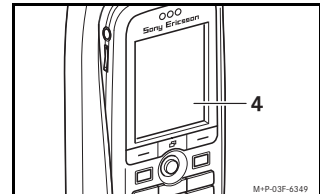

The message "Vehicle profile" appears on the display (4) of the mobile phone. If this message does not appear: remove (see below) and re-insert the mobile phone.


4

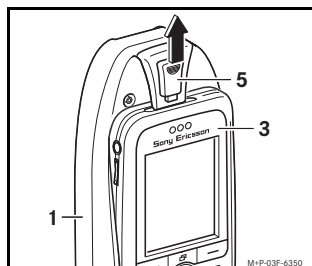

Push the release (5) upwards and pull the mobile phone (3) out of the bracket (1).

Detaching the mobile phone bracket

1. Take the mobile phone out of the bracket.

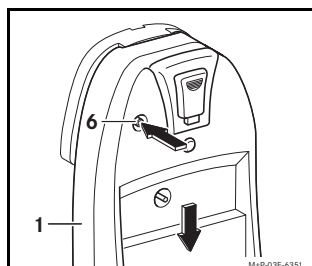

2. Press the release button (6), push the bracket (1) downwards and detach.

Operating instructions

Please refer to your vehicle's Owner's Manual for operating instructions regarding the mobile phone bracket in connection with the factory-installed hands-free system (code 386/388).

The following operating instructions only refer to the retro-fitted accessory-solution of the Mercedes-Benz hands-free system for the multi-function steering wheel (MB FSE-MFL).

- Please refer to your vehicle's Owner's Manual for operating instructions for the hands-free system for the multi-function steering wheel.
- Press **+** to display the caller's name (depending on vehicle model).
- Press **-** to display the caller's number (depending on vehicle model).
- Press **+** or **-** to set the volume during a phone call.

Notes

When placing the activated mobile phone into the bracket, you must see the message "Vehicle profile" in the display. If this message does not appear: switch off and then switch on the mobile phone.

The hands-free system cannot access the SIM-card telephone book. If you would like to make use of the SIM-card telephone entries, you have to copy them into the mobile phone's telephone book (see the mobile phone's operating instructions).

If the mobile phone uses a pre-paid system, then the mobile phone bracket cannot be used.

If the mobile phone is in hands-free mode, it is not possible to use a Bluetooth headset.

Only for vehicles with mobile phone fitting with interface (Code 386), or Mercedes-Benz mobile phone (Code 388):

The speed dial function can be set on Mercedes-Benz radios with a keypad. It is possible to access telephone book preset positions 1 - 9 using the digits 1 - 9. In order to be able to call up the necessary telephone numbers, the preset positions 1 - 9 must have numbers saved in them (see the mobile phone operating instructions). If you wish to save a number, for example, in preset position 1, you first have to dial the number on the keypad and then assign it a new name.

To suppress your telephone number, the appropriate setting must be selected on your mobile phone (please refer to the operating instructions of the mobile phone).