


Mercedes-Benz

Accessories

Installation Instructions

Mobile telephone bracket Siemens CX 65, CX 65v, CXT 65, CX 70, CX 70v and CXT 70

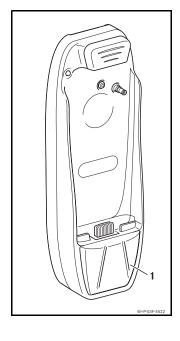



Validity

These installation instructions are valid for vehicles with

- mobile-phone fittings, including an interface (code 386) or
- Mercedes-Benz mobile phone (code 388) or
- Mercedes-Benz hands-free system for the multi-function steering wheel

together with a Siemens CX65, CX 65v, CXT 65, CX 70, CX70v or CXT 70 mobile phone.

Parts included

(1) Mobile telephone bracket

Notes

Please contact a qualified specialist workshop if you encounter difficulties when fitting the mobile telephone bracket. Mercedes-Benz recommends that you use a Mercedes-Benz Service Centre for this pur-

The manufacturer reserves the right to change technical details from those shown in the illustrations contained in these installation instructions.

These installation instructions also refer to the vehicle Owner's Manual. Please keep it handy for reference.

© 2007, Daimler AG


03/05 03F039-05

Contents

Fitting the mobile telephone bracket Inserting the mobile telephone Hands-free mode display Removing the mobile telephone Detaching the mobile telephone $\,\,\,\triangleright\,\,6$ bracket Operating instructions ⊳ 7 2

Fitting the mobile telephone bracket

3

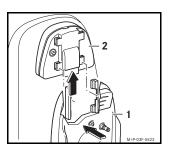


Press the bracket (1) into the catches on the pre-installed retainer (2), keep the bracket (1) pressed and slide it upwards until it clicks into place.

Inserting the mobile telephone



4

- 1. Remove the round cover (3) from the rear of the mobile telephone (4).
- 2. Slide the lower section of the mobile phone (4) onto the connector (5) of the bracket (1).

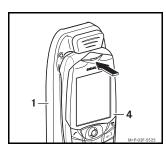

3. Press the upper part of the mobile telephone (4) into the bracket (1) until the mobile telephone (4) engages in the bracket (1).

Hands-free mode display


For the hands-free system to function properly, the mobile telephone has to be fitted and switched on, and hands-free mode has to be activated.

5



A message appears on the display (6) of the mobile telephone (please refer to the operating instructions of the mobile telephone for the exact wording of the message). If this is not the case, remove the mobile telephone (refer to the section entitled "Removing the mobile telephone") and re-insert it.

Removing the mobile telephone

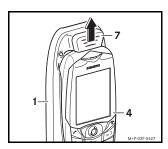

- Slide the locking tab (7) upwards and pull the top of the mobile telephone (4) out of the bracket (1). Then take the mobile telephone (4) up and out of the bracket (1).
- 2. Put the round cover back on the rear of the mobile telephone (please refer to the section entitled "Fitting the mobile telepho-

Detaching the mobile telephone bracket

1. Remove the mobile telephone from the bracket (please refer to the section entitled "Removing the mobile telephone").



Press and hold the release button (8). Slide the bracket (1) downwards and remove it from the pre-installed retainer (2).

Operating instructions

- 1. Please refer to your Mercedes-Benz vehicle Owner's Manual for operating instructions regarding the mobile telephone bracket in connection with the factoryinstalled hands-free system (code 386/ 388).
- 2. The following operating instructions (points a, b, and c) only refer to the retrofitted accessory solution of the Mercedes-Benz hands-free system for the multi-function steering wheel. The buttons "+" and "-" mentioned in the description below refer to the multi-function steering wheel.
- General operation of the hands-free system: Operation of the hands-free sys tem via the multi-function steering wheel and how to set the run-on time are explained in the vehicle Owner's Manual.
- Displaying complete names or telephone numbers (this function depends on the vehicle model): The "+" button must be pressed to display the full name of the caller. The "-" button must be pressed to display the entire telephone number of the caller.
- Adjusting the volume of a conversation: During a telephone call, the volume can be increased with the "+" button and decreased with the "-" button.